

DIRECT+
Conditioning System

☐ Authority22
☐ Envoy
Select Machine

Brunswick®

Pattern Information

Date
Pattern Type
Pattern Difficulty
Pattern Designer

Surface Information

Surface Type
Surface Brand
Age

Pattern Parameters

Pattern Number
Pattern Name
Mode
Forward Speed
Start Cleaner Spray
Start Squeegee
Start Oiling
Split Pattern


Supplies Information

Lane Cleaner
Cleaner Mixture Ratio
Cleaner Transition Distance
Cleaner Spray End Distance
Lane Conditioner

Notes REV A

Zone	1	2	3	4	5	6	7	8
Zone End Distance	5	10	15	20	26	35	44	50
Zone Ratio	L 2.0 : 1	2.6 : 1	3.4 : 1	3.4 : 1	3.9 : 1	3.6 : 1	### : 1	### : 1
	R 2.0 : 1	2.5 : 1	3.0 : 1	2.7 : 1	3.3 : 1	2.3 : 1	### : 1	### : 1

ZONE	7 Pin Side													Board Number										10 Pin Side														
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2
1	0	0	36	36	59	59	59	77	83	99	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	99	83	77	59	59	59	36	36	0	0
2	0	0	30	30	40	40	50	65	70	86	92	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	100	92	92	70	70	60	45	45	35	15	0	0
3	0	0	15	20	33	33	41	54	58	70	76	98	98	98	98	98	98	98	98	98	98	98	98	98	98	98	98	76	76	65	65	60	38	38	15	10	0	0
4	0	0	10	15	26	26	33	42	46	55	60	76	76	76	76	76	76	76	76	76	76	76	76	76	76	76	76	60	60	46	46	46	38	38	10	5	0	0
5	0	0	5	7	15	19	24	31	33	40	44	55	55	55	55	55	55	55	55	55	55	55	55	55	55	55	55	50	45	45	35	35	19	19	10	0	0	0
6	0	0	3	5	12	12	15	19	21	25	27	34	34	34	34	34	34	34	34	34	34	34	34	34	34	34	34	27	27	21	21	21	21	21	5	3	0	0
7																																						
8																																						

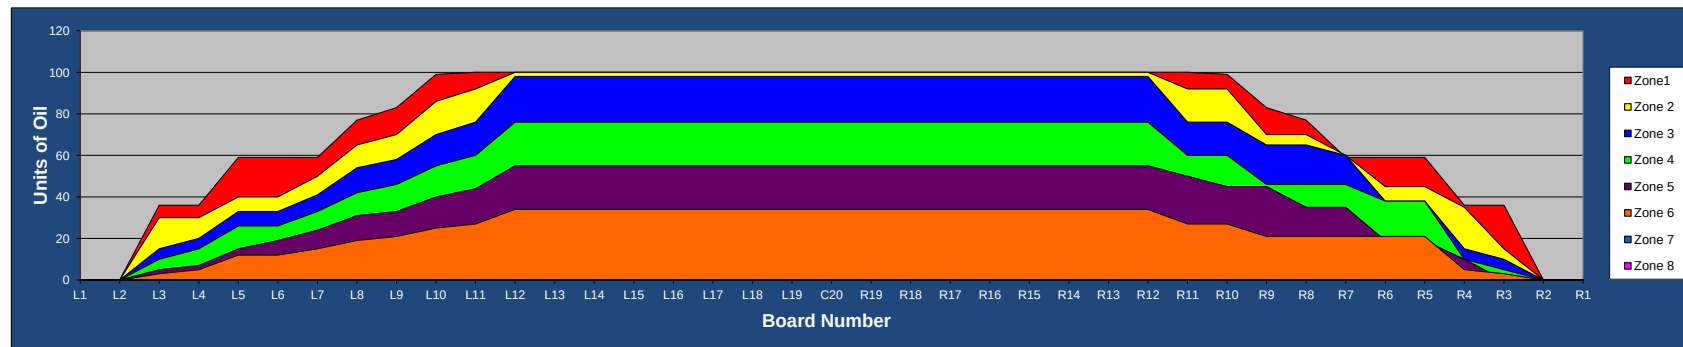



キョーホームプレゼンツ

AUTHORITY 22[®]

Crosswise Ratios

	Zone 1	Average	Ratio
3L-7L	Left =	49.8	2.0
3R-7R	Right=	49.8	2.0
18L-18R	Center =	100.0	

	Zone 2	Average	Ratio
3L-7L	Left =	38.0	2.6
3R-7R	Right=	40.0	2.5
18L-18R	Center=	100.0	

	Zone 3	Average	Ratio
3L-7L	Left =	28.4	3.4
3R-7R	Right=	32.2	3.0
18L-18R	Center=	98.0	

	Zone 4	Average	Ratio
3L-7L	Left =	22.0	3.4
3R-7R	Right=	27.4	2.7
18L-18R	Center =	76.0	

	Zone 5	Average	Ratio
3L-7L	Left =	14.0	3.9
3R-7R	Right=	16.6	3.3
18L-18R	Center=	55.0	

	Zone 6	Average	Ratio
3L-7L	Left =	9.4	3.6
3R-7R	Right=	14.2	2.3
18L-18R	Center=	34.0	

	Zone 7	Average	Ratio
3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right=	#DIV/0!	#DIV/0!
18L-18R	Center =	#DIV/0!	

	Zone 8	Average	Ratio
3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right=	#DIV/0!	#DIV/0!
18L-18R	Center=	#DIV/0!	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

Lengthwise Ratio By Area

	3L-7L	18L-18R	3R-7R
	Left	Center	Right
Zone 2	1.3	1.0	1.2
Zone 3	1.7	1.0	1.5
Zone 4	2.2	1.3	1.8
Zone 5	3.5	1.8	3.0
Zone 6	5.2	2.9	3.5
Zone 7	#DIV/0!	#DIV/0!	#DIV/0!
Zone 8	#DIV/0!	#DIV/0!	#DIV/0!

Brunswick®

フォーホームプレゼンツ

AUTHORITY 22®

Lengthwise Ratio By Board

	7 Pin Side															Board Number										10 Pin Side																
Zone	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1			
2	###	###	1.2	1.2	1.5	1.5	1.2	1.2	1.2	1.2	1.1	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.1	1.1	1.2	1.1	1.0	1.3	1.3	1.0	2.4	###	###				
3	###	###	2.4	1.8	1.8	1.8	1.4	1.4	1.4	1.4	1.3	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.3	1.3	1.3	1.2	1.0	1.6	1.6	2.4	3.6	###	###				
4	###	###	3.6	2.4	2.3	2.3	1.8	1.8	1.8	1.8	1.7	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.7	1.7	1.8	1.7	1.3	1.6	1.6	3.6	7.2	###	###				
5	###	###	7.2	5.1	3.9	3.1	2.5	2.5	2.5	2.5	2.3	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	2.0	2.2	1.8	2.2	1.7	3.1	3.1	3.6	###	###	###				
6	###	###	12.0	7.2	4.9	4.9	3.9	4.1	4.0	4.0	3.7	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	3.7	3.7	4.0	3.7	2.8	2.8	2.8	7.2	12.0	###	###				
7	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	
8	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###	###

The lengthwise ratios are calculated from the volumes in the first zone.